

H8P AND H10P SERVICE PARTS

H8P AND H10P SERVICE PARTS		H8P WINCH STANDARD DRUM	H8P WINCH LONG DRUM	H10P WINCH STANDARD DRUM	H10P WINCH LONG DRUM
CONTENTS	DESCRIPTION	PART NUMBER			
31	Control Block Assembly	5060PRO-006	5060PRO-006	5060PRO-006	5060PRO-006
9	Friction Plate Assembly (Brake Disk)	5050PRO-006	5050PRO-006	5050PRO-006	5050PRO-006
6, 10, 12, 24, 25	Small Parts Kit	5050PRO-009	5050PRO-009	5050PRO-009	5050PRO-009
22, 23	Clutch Actuator Assembly (Manual)	5050PRO-012	5050PRO-012	5050PRO-012	5050PRO-012
32	Motor Assembly	S106100	S106100	S106102	S106102
(Not Shown)	Clutch Actuator Assembly (Air)	5603	5603	5603	5603
(Not Shown)	Fairlead, Roller	5600	5610	5600	5610
(Not Shown)	Cable Tensioner	5606	5607	5606	5607

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	4-36-0603022	M6 Socket Head Screw	6
2	4-51-0623	M6 Spring Washer	6
3	4-36-0601022	M6 Socket Head Screw	2
4	4-23-063	Screw Seal	2
5	4-56-802003	Roll Pin	3
6	4-31-1403030403	Spring	6
7	50-90622-01	Brake Housing	1
8	10002	Pressure Plate	1
9	10028	Friction Plate Assembly	1
10	10063	Brake Gasket	2
11	50-95074-1	Bearing Plate	1
12	5050PRO-009-3	Ball Bearing	1
13	4-26-2517123	Snap Ring	1
14	50-50056	Drive Shaft	1
15	50-54013	Sun Gear	1
16	10006	Thrust Washer	2
17	10061	1st Stage Carrier Assembly	1
19	10011	2nd Stage Carrier Assembly	1
20	10051	Thrust Washer	1
21	50-90547	Gear Housing Assembly	1
22	10076	Clutch Actuator	1
23	10295	Washer	1
24	4-22-140161123	Drum Seal	2
25	10049	Drum Bearing	1
26	50-90684 (H8P Standard) 50-90685 (H8P Long) 50-90708 (H10P Standard) 50-90688 (H10P Long)	Drum	1
27	50-90014 (H8P/H10P Standard) 50-90015 (H8P/H10P Long)	Coupling Tube	1
30	50-90424	Support Housing	1
31	5060PRO-006	Control Block Assembly	1
32	S106100 (H8P Standard/Long) S106102 (H10P Standard/Long)	Motor Assembly (Includes O-Rings)	1

